 


How to replace LNB

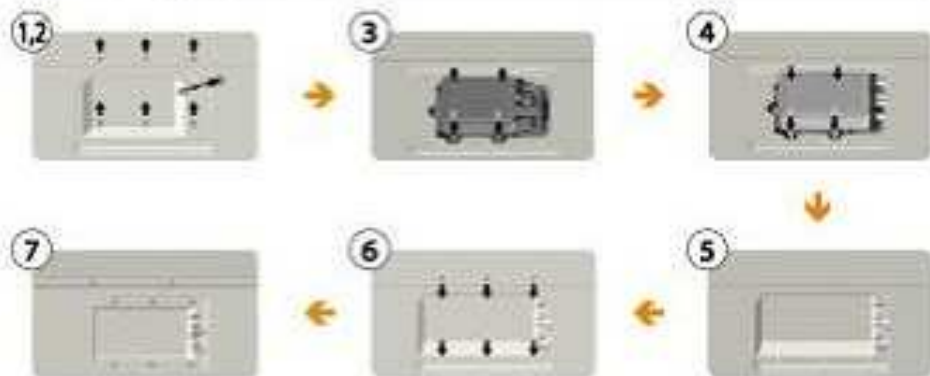

1. Remove the six screws, the 13mm nuts and 'O' rings from LNB cover.
2. Remove the LNB cover and elastic protection seal by sliding out.
3. Remove the four screws that secure the LNB and then remove the LNB.
4. Insert the new LNB(with shield pad) and fix in place with the four screws.
5. Replace the LNB cover and elastic protection seal.
6. Replace the six LNB cover screws.
7. The new LNB is now complete.



1. Ziehen Sie die Bolzen, 13mm Mutter und O-Ring aus der LNB-Abdeckung.
2. Entfernen LNB-Abdeckung und elastische Gummi-Schutz.
3. Ziehen Sie Schrauben aus dem LNB, dann entfernen das LNB.
4. Setzen Sie neue LNB und Schraube ein.
5. Ersetzen Sie die LNB-Abdeckung und den elastischen Gummi-Schutz an der Antenne.
6. Schraubklemmen.
7. Fertig.

SELSAT


Interchangeable LNB for SELFSAT-H21D

www.self-sat.com

SELSAT

LNB for SELFSAT-H21D

Now you can change LNB by yourself from Single to Twin, to Quad, to Quattro.
It makes possible to use several receivers at the same time.

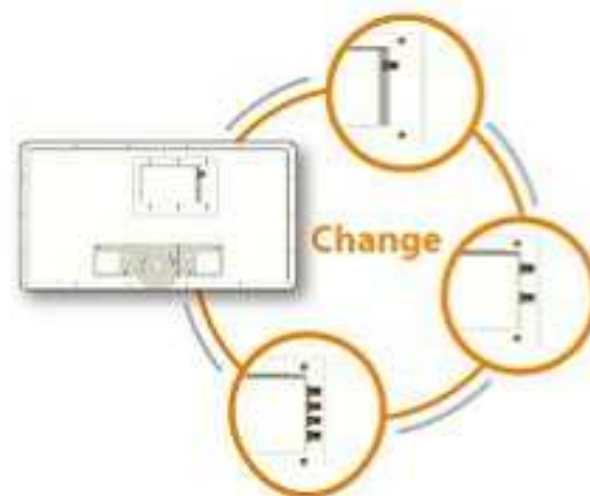

Components

LNB with shield pad



Plastic cover



Protection rubber



Screw



NOTICE

- Use this LNB pack for SELFSAT-H21D model only.
- Read and understand instruction guide behind, before replacing LNB.
- Please use our original LNB pack, otherwise antenna may not work properly and your warranty will be void.
- Always keep this LNB pack away from children.
- For waterproof, do not remove Shield Pad from LNB.
- Shield Pad can replace O-ring & 13mm nut.
- This manual may be revised without prior consent.



SELSAT-LDU4



3 700433 800174

www.self-sat.com